

## TRAIN DETECTOR WITH RELAY BOD2-RLY



### Detects trains and operates a built-in relay.

- Quick and easy way to detect trains anywhere on your layout, even in tunnels
- Detects passing trains using its in-built infra-red sensor
- Very easy to connect up to simple indications on a control panel or to add as inputs to computer systems
- Operates from 8V to 25V DC or 8V to 16V AC
- Low current output (+5V DC) to feed leds, signals or small relays
- No soldering required, all components are ready wired
- No programming necessary (but you can adjust all settings if you wish)

We often are asked how to detect trains in tunnels, or on layouts where enthusiasts run their trains in twilight, or even in complete darkness. In these situations, photocell operated detectors will not work, and so you need a detector with a built-in light source.

The BOD2-RLY has a built-in infra-red detector which can "see" in the dark and can detect trains in these situations.

The module has a small relay built-in. When a train crosses the sensor, the relay coil is energised and the relay common contact (labelled COM) moves from the normally-closed (NC) position to the normally open position NO.


After the train clears the sensor, the module de-energises the relay and the relay contact moves to the normally-open position.

A delay can be set before this occurs to allow a train indication to remain present for a period, or the indication can immediately reset. The module can also be set to ignore the gaps between carriages. With a delay, the module can operate a two aspect signal, switching to red when a train crosses the sensor, and back to green a preset time after the sensor is cleared.

You can power the module from 12V-25V DC or 12V to 16V AC. The module reduces the supply voltage down to 5V to feed attached leds, etc.


## Installation

Simply drill an 8mm hole through the baseboard between the sleepers and insert the sensor from below.

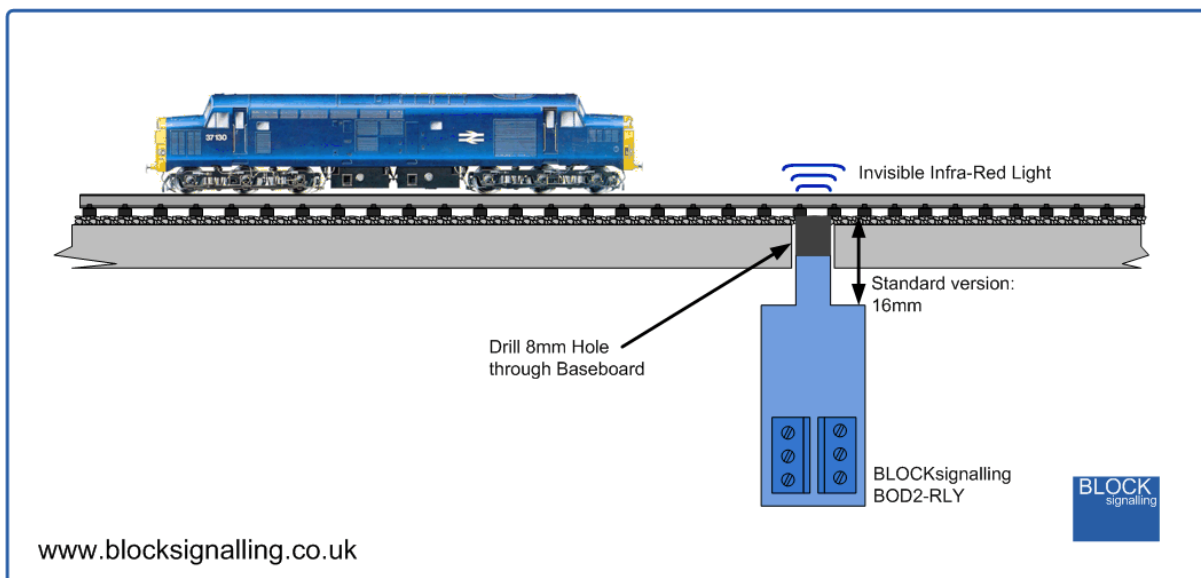

If required, the sensor can be held in place using a small amount of blutack, expanded polystyrene or similar.

The led diameter is 2.2mm, so on smaller scales the leds can still have a clear view between the sleepers.

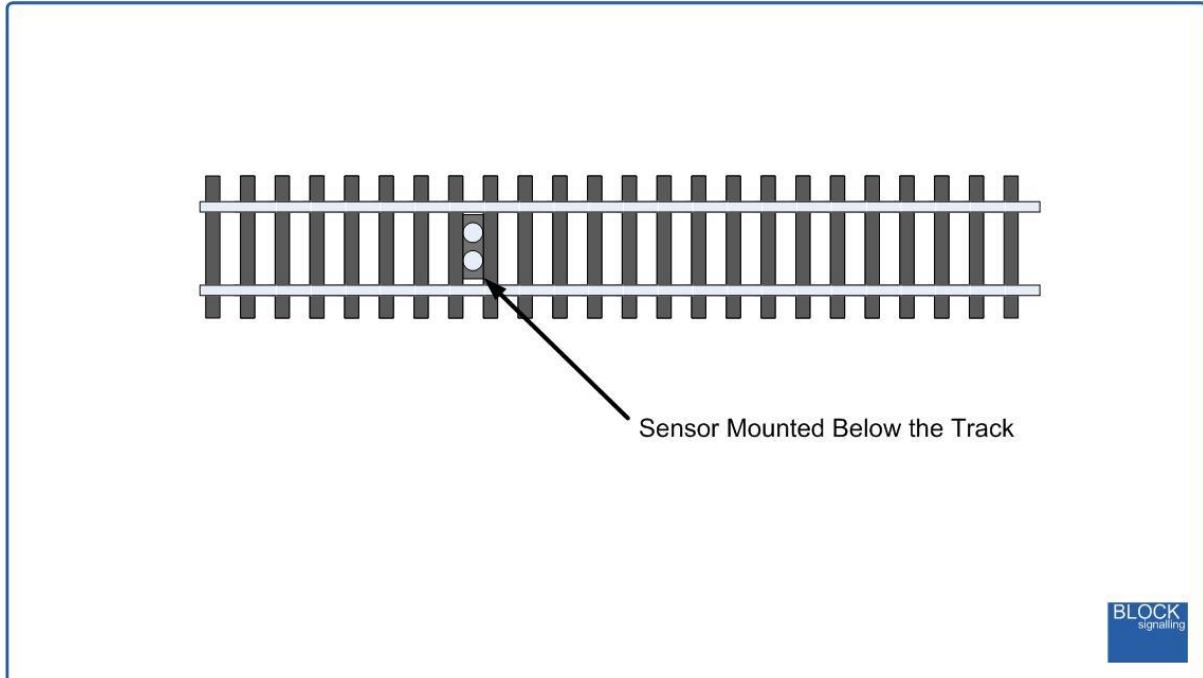

## Power Supply


The module will operate reliably with a power supply in the range of 10V to 25V DC or 12V to 16V AC.

When connecting a DC supply, connect the negative to the GND terminal and the positive to the Vin terminal. If the connections are accidentally reversed, the module will not function, but no damage will result.

When connecting AC the connections can be made either way around.

## Connecting up

The relay outputs are available on the normally-open (NO), common (COM) and normally-closed (NC) contacts. When the power is turned off, the relay de-energises and the connection is made between the NC and COM connections.

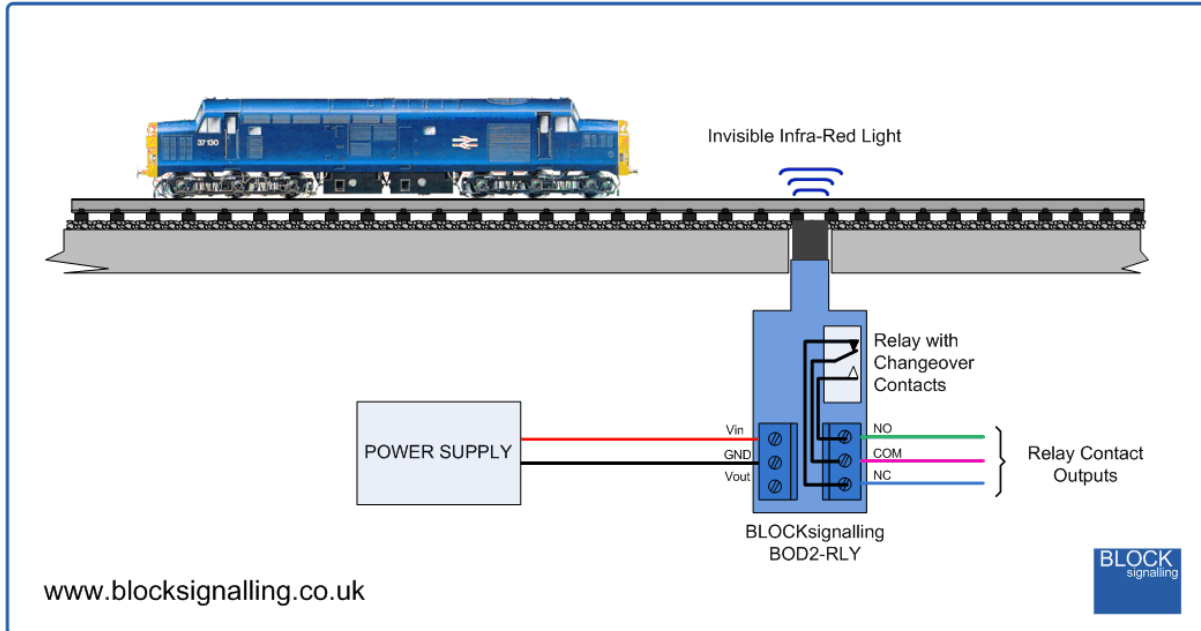

The relay output can be used to connect to leds, filament bulbs, relays, or computer systems. There are no volts on the contacts (they are "volt free").

## Terminals

The module has six terminals.

**Vin** This is one side of the AC supply input feeding the module (or the positive feed if a DC supply is being used)

**GND** This is the other side of the AC supply input feeding the module (or the negative feed if a DC supply is being used).

**Vout** This is a regulated +5V DC output which can be used to feed leds, small relays, or bulbs (maximum 100mA).

**NO** The terminal is the normally-open contact of the relay.


**COM** The terminal common terminal of the relay.

**NC** The terminal is normally-closed contact of the relay.

## LED Connection


When using leds it is important to connect them the right way around.

The negative lead (cathode) is identified by a flat on the side of the led body, and by having a shorter lead.

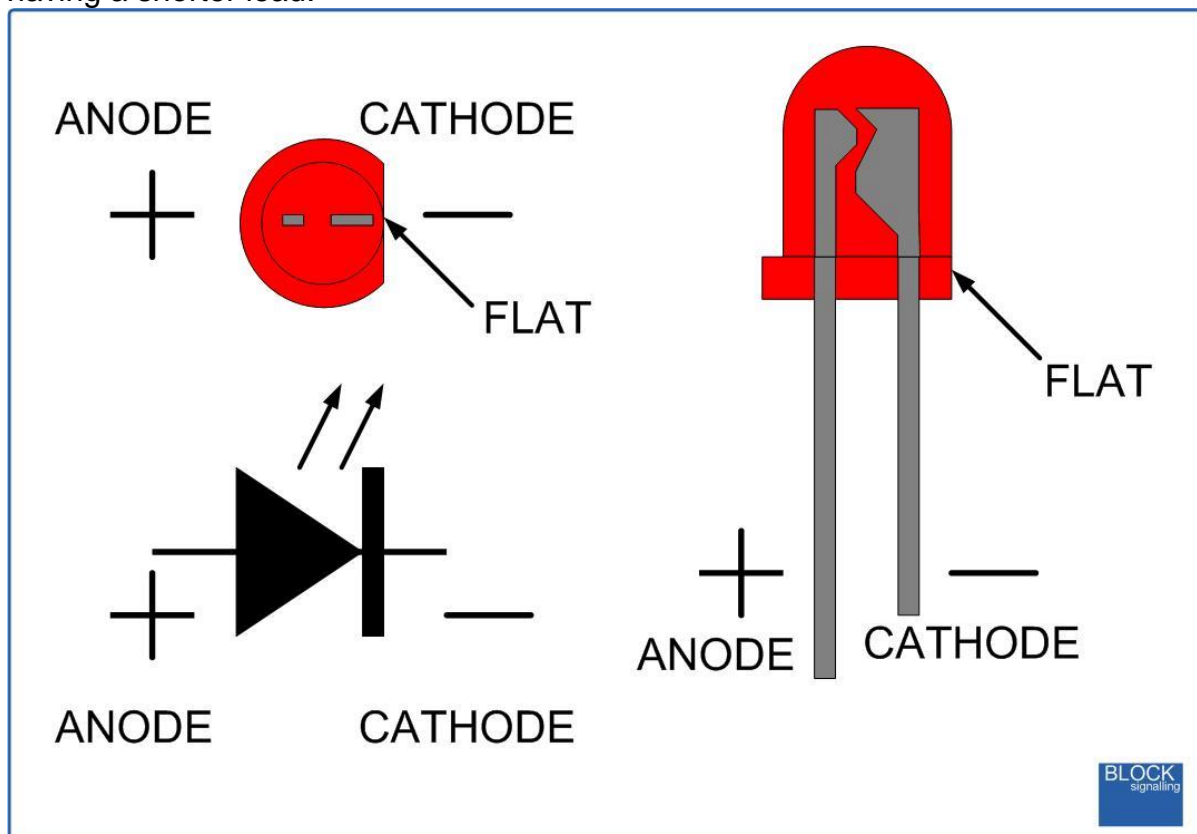

Shown below is an example wiring diagram to connect a 2-aspect signal or control panel leds to the BOD2-RLY.


A 1k resistor is necessary to limit the current through the leds.

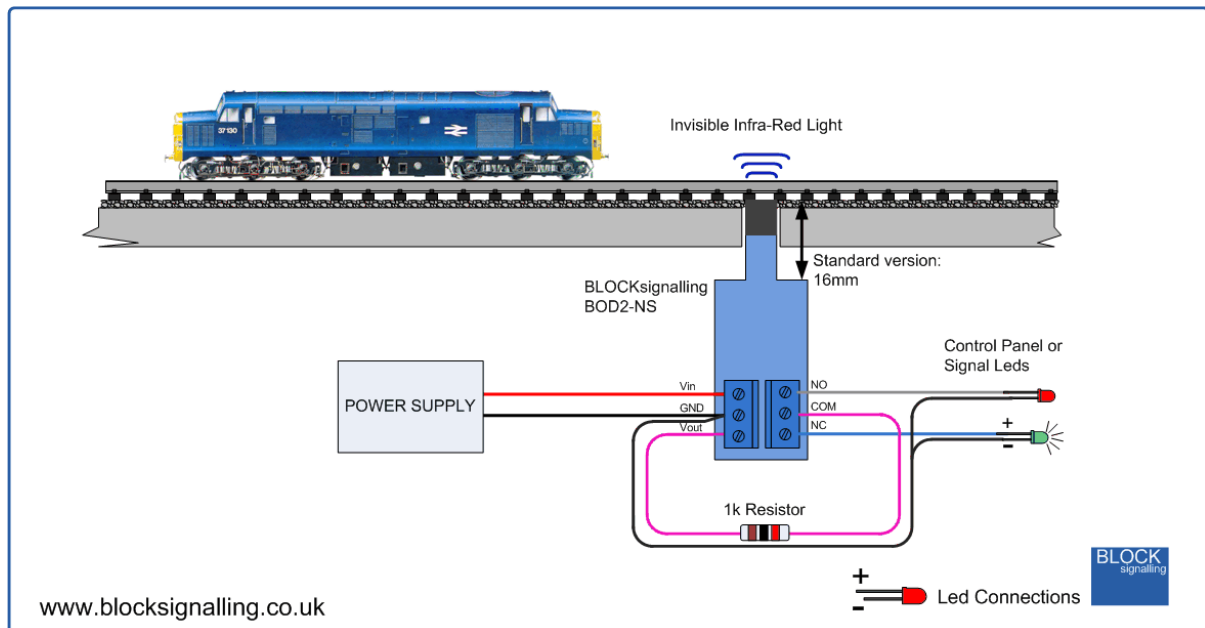

## Programming

The default program is to operate in the instantaneous mode, so if you want one of the other modes, you will need to reprogram the module.

Programming is performed holding down the Push Button when switching on the power.

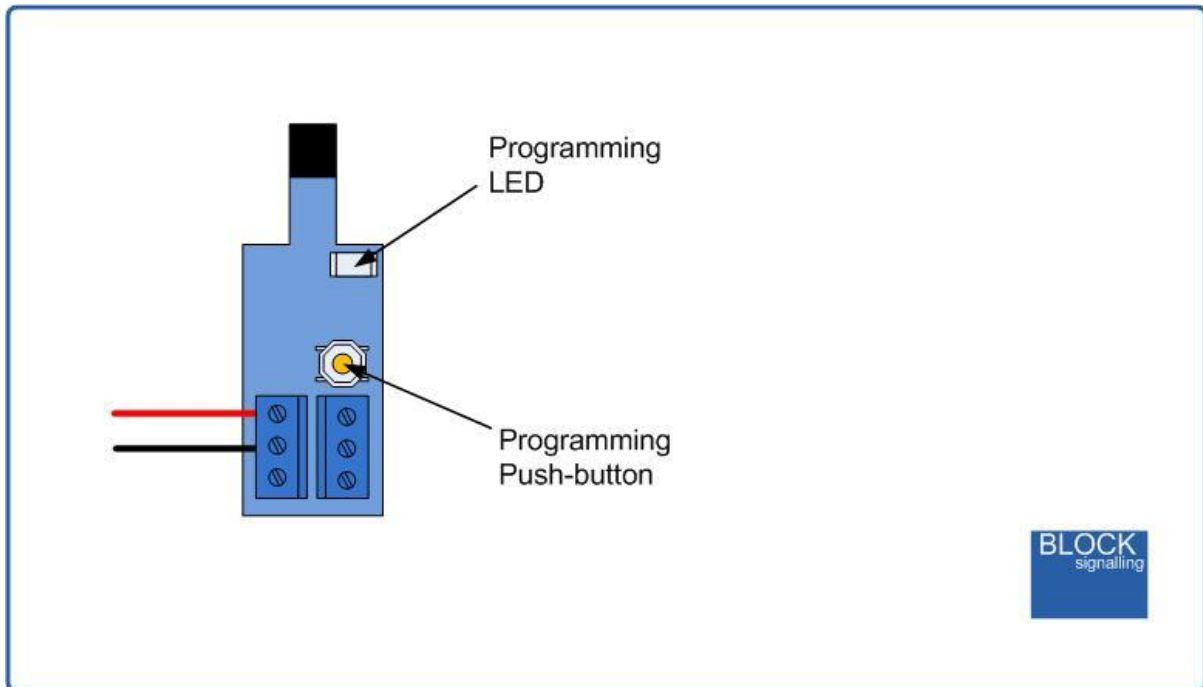

The red led on the PCB flashes at 1 second intervals. When the required number of flashes is seen (see later for the list of possible choices) the button is released to store the first value. At this point the led comes on for five seconds to confirm the value is stored.

The led then starts flashing again, and this time the button needs to be pressed to store the second value.

Once the two values to be stored are entered, the led flashes 10 times rapidly, and the module starts operating.

Most values entered can range between 1 and 255 (see below for limits). If more flashes are seen, or the programming is aborted by switching off, then the programming must be repeated.

## Factory Reset

To reset the module back to factory settings, switch off the power to the module and hold down the Push Button. Apply the power and continue holding the push button until **1 flash** of the led is seen. At this point, release the button. You will see a long flash of five seconds.

The led will begin flashing again. When you have seen **1 flash** press the button. You will see a long flash of five seconds and then 10 rapid flashes. The reset procedure is then complete and the module will restart with factory settings, and run in instantaneous mode. If you make a mistake programming, simply repeat the process.

## Sensitivity Setting

The module is supplied with the sensitivity preset to suit most installations and should not need adjustment.

The sensitivity is factory set to 5, and can be adjusted from 1 to 10 (with 1 being the most sensitive and 10 being the least sensitive).

	Trigger Threshold					
	<b>2</b>	<b>3</b>	<b>4</b>	<b>5</b>	<b>6</b>	<b>7</b>
Aluminium Foil (shiny side)	170mm	125mm	100mm	95mm	90mm	85mm
A4 White Paper	100mm	65mm	50mm	45mm	40mm	35mm
Matt Black Card	55mm	35mm	30mm	25mm	20mm	15mm
Shiny Black Plastic	45mm	30mm	25mm	20mm	18mm	15mm

To change the sensitivity, switch off the power to the module and hold down the Push Button. Apply the power and continue holding the Push Button until **9 flashes** of the led are seen. At this point, release the button. You will see a long flash of five seconds.

The led will begin flashing again. When you have reached the desired number of flashes to set the new sensitivity, press the button. You will see a long flash of five seconds and then 10 rapid flashes. The programming is then complete and the module will restart. If you make a mistake programming, simply repeat the process.

Performing a factory reset will reset the sensitivity setting back to 5.



## **Built-in Programs**

In order to set-up the module with minimum effort, there are several programs built-in.

Selecting one of these programs will perform a factory reset on the module (losing any previously made changes), and then make a number of setting adjustments automatically.

If you want to further refine the settings of these programs, follow the instructions in the section after selecting the required program.

### **Program 1 - Test Mode**

In this mode, the relay is energised for 1 second, and then denergised for 2 seconds.

This is repeated until another mode is selected.

### **Program 2 - Instantaneous Mode (DEFAULT)**

When the infra-red sensor is triggered by a train, the module immediately activates the relay.

The module checks to see if the train has cleared the sensor.

If the train has cleared the sensor for at least 1 second, the relay is denergised.

The module then restarts and awaits the next train.

### **Program 3 - Signal Mode**

When the infra-red sensor is triggered by a train, the module immediately activates the relay.

The module checks to see if the train has cleared the sensor.

If the train has cleared the sensor for at least 4 seconds, the module waits 10 seconds, and then the relay is denergised.

The module then restarts and awaits the next train.

## **Program Flow Diagram**

The diagram below shows all the programming options.

Programming is performed by holding down the Push Button when switching on the power.

The red led on the PCB flashes at 1 second intervals. When the required number of flashes is seen (see later for the list of possible choices) the button is released to store the first value. At this point the led comes on for five seconds to confirm the value is stored.


The led then starts flashing again, and this time the button needs to be pressed to store the second value.

Once the two values to be stored are entered, the led flashes 10 times rapidly, and the module starts operating.

The led will now flicker whilst the module searches for trains.

Most values entered can range between 1 and 255 (see below for limits). If more flashes are seen, or the programming is aborted by switching off, then the programming must be repeated.

Following the diagram is an explanation of all the settings.

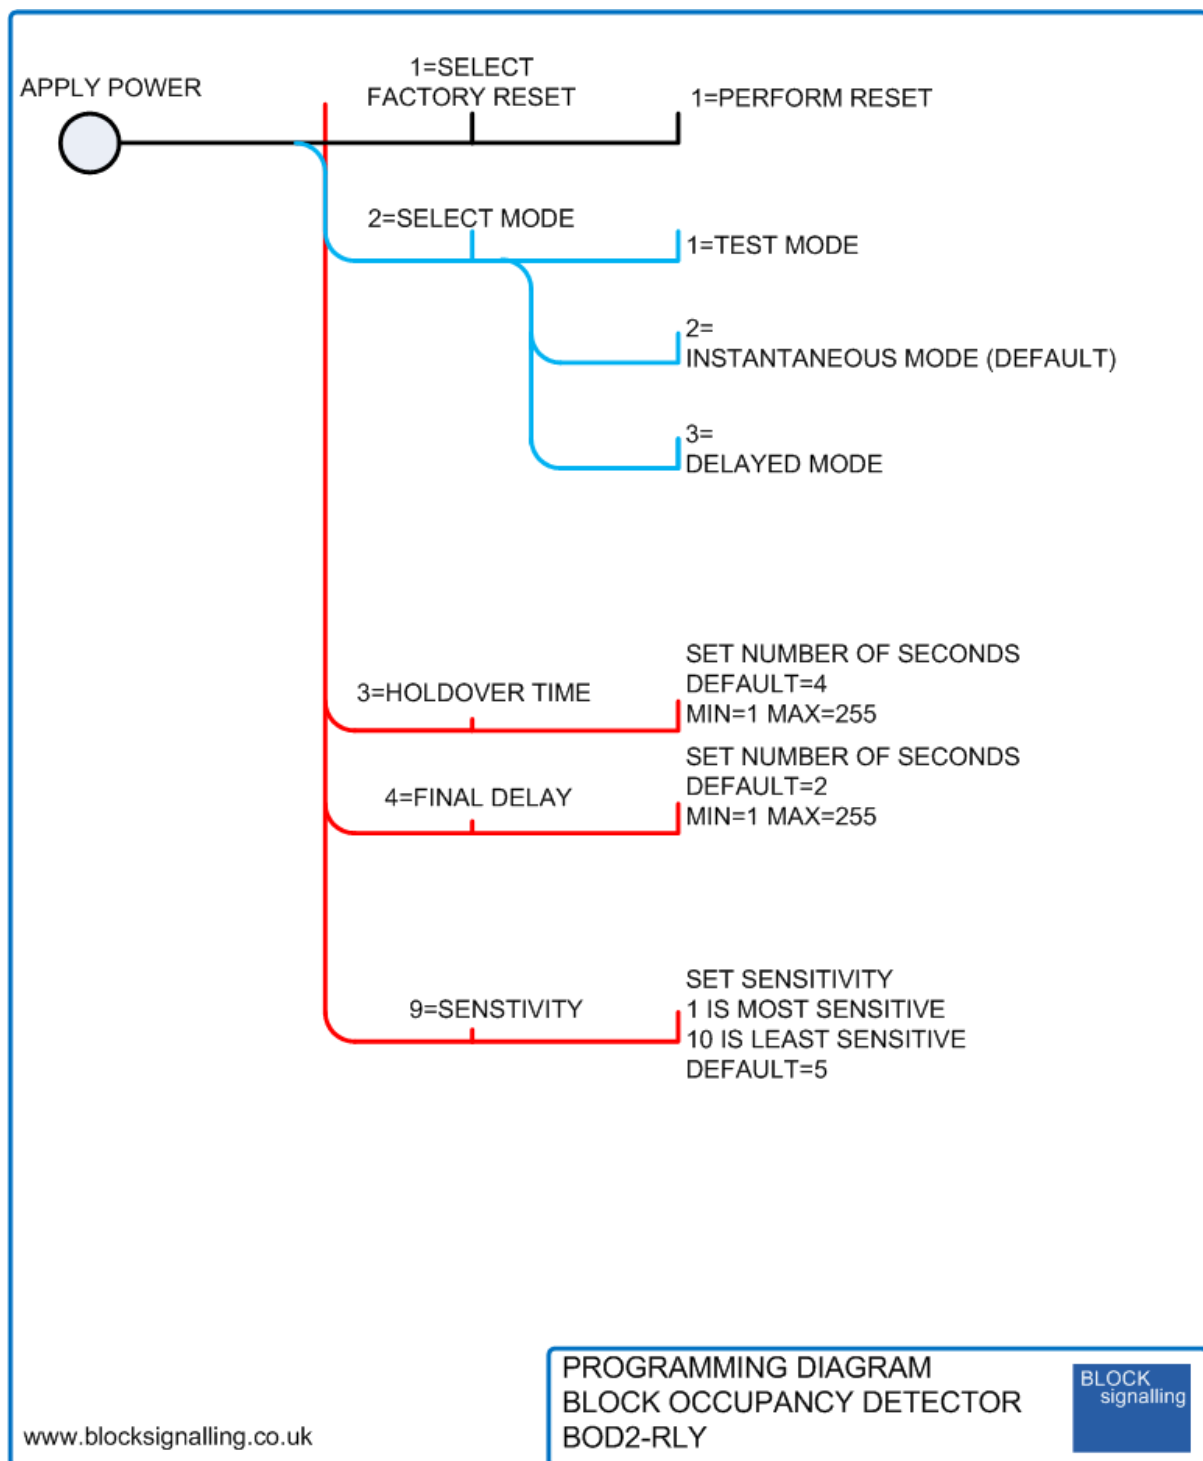

Any additional components shown in diagrams and photos are only to illustrate connections and are not included with the module.